


VC120: User Guide

In the box:

SIMPLEFLIX™ digital video camera

User Guide

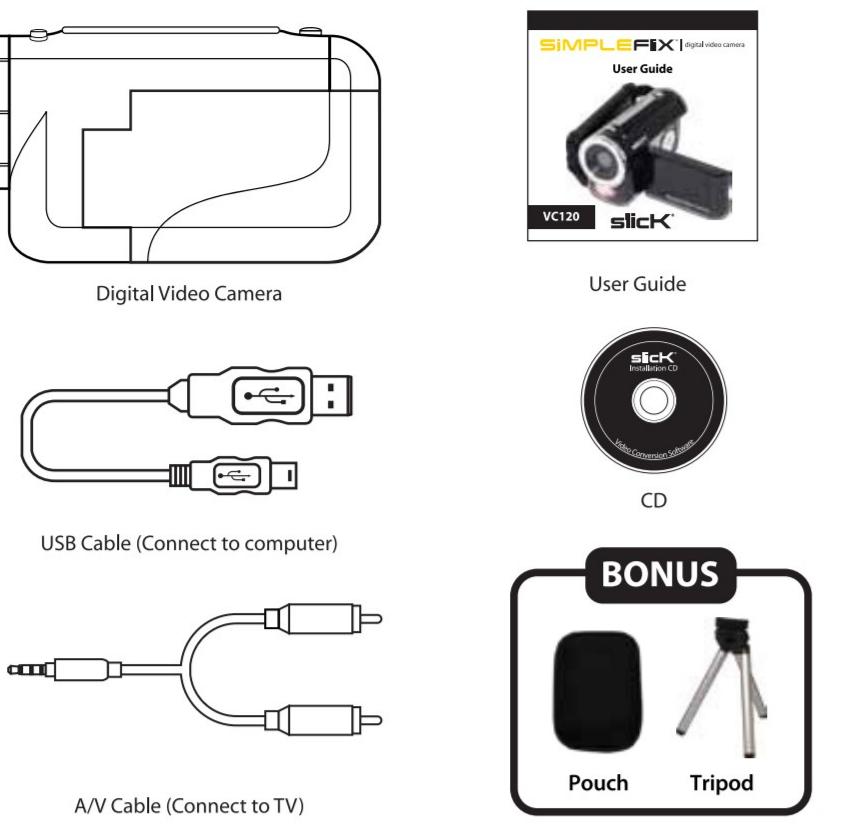


Setting up your camera:

Battery Installation

- Open the battery cover by sliding it in the direction of the arrow.
- Insert 3 alkaline "AAA" size batteries (not included) into the compartment.
- Replace the battery cover.

SD card Installation
This camera has no internal memory and requires an SD / SDHC card (SD card not included) to record videos or take pictures. The camera can support SD / SDHC cards up to 4GB. To install the SD card into the camera, follow the steps below:

- Turn off the camera.
- Insert the SD card into the card slot (as shown below) until it clicks and locks into place.
- To remove the card, gently push it in until it pops out.

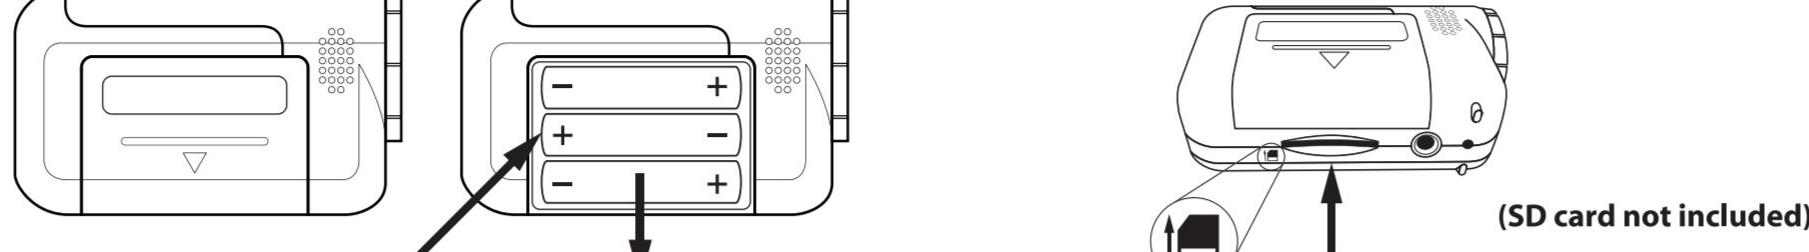

- A card can only be inserted one way; do not use force when inserting the card.
- Inserting or removing a card while the camera is on may damage the card, files stored on the card, or the camera.
- This camera supports SD or SDHC cards up to 4GB.

Using your camera

Turning the camera ON/OFF

- Open the display screen.
- To turn on the camera, press and HOLD the [] button until the display turns on.
- To turn the camera off, press and HOLD the [] button until the display turns off.

Setting the date/time

- Turn on the camera.
- Press the [OK] button, and use the [] button to select [].
- Use the [] button to scroll down to "Date & Time" and press the [] button.
- Adjust the date and time and press the [OK] button.



Video Mode

Connecting the tripod

Screw in and secure the included tripod to the bottom of the video camera as shown in the diagram.



Locations of controls




Picture Mode

Playback Mode

Camera modes


When you turn on the camera, the default mode is **Video Mode**. To scroll through and select one of the three camera modes below, press the [MODE] button until the desired mode is displayed.

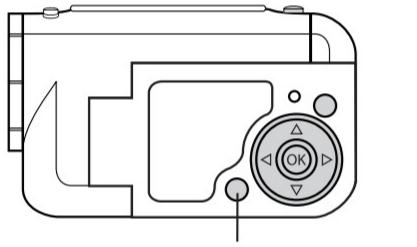

Press the [MODE] button to scroll through:
 - Video Mode (default mode) – Record videos
 - Picture Mode – Take pictures
 - Playback Mode – Playback videos or view pictures

Macro shooting

To film or take pictures of objects up close (6"-10") such as flowers insects etc., slide the [Macro] switch to the [] position.

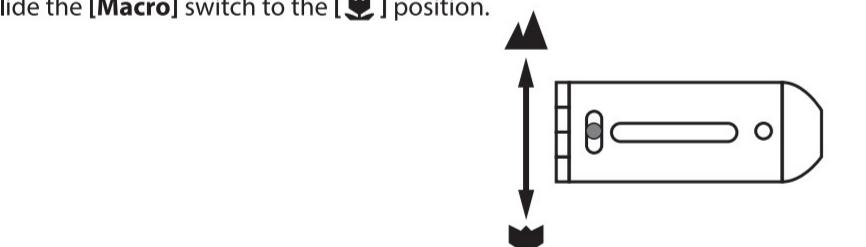

General shooting

For normal video or picture taking, slide the [Macro] switch back to the [] position.

System Settings

Press the [OK] button within any mode and follow the steps below to access the **System Settings Screen**.

- Use the [] button to select [].
- Use the [] [] [] [] buttons to select an option, and confirm by pressing the [OK] button.
- Press the [OK] button once again to exit the **System Settings Screen**.

Default Screen



System Settings Options

POWER FREQUENCY	On / Off 50Hz / 60Hz (The camera's default setting is 60Hz for the USA and North America)
POWER SAVE	Select 1, 3, or 5 minutes. To conserve battery power, the camera will shut off if no buttons are pressed within the selected time.
DATE & TIME	Set the date and time.
LANGUAGE	Select a display language.
TV OUT	PAL / NTSC (The camera's default setting is NTSC for the USA and North America).
USB	MSDC OR PCCAM (Only select PCCAM when you would like to use the camera as a webcam).
START-UP IMAGE	Change the start up image.
FORMAT	Format the SD / SDHC card (Deletes everything on the card).
RESET ALL	Reset the camera to factory default settings.

Video Mode Settings

Press the [OK] button within any mode and follow the steps below to access the **Video Mode Settings Screen**.

- Use the [] button to select [].
- Use the [] [] [] [] buttons to select an option, and confirm by pressing the [OK] button.
- Press the [OK] button once again to exit the **Video Mode Settings Screen**.

Default Screen



Video Mode Settings Options

MOVIE SIZE	• 640x480 (higher quality video/shutter recording time) • 320x240 (lower quality video/longer recording time)
FRAME RATE	• 30 Frames Per Second (higher quality video/shorter recording time) • 15 Frames Per Second (lower quality video/longer recording time)
METERING	• Center / Multi / Spot
WHITE BALANCE	• Auto / Daylight / Cloudy / Fluorescent / Tungsten
EFFECT	Normal / B&W / Sepia / Negative / Red / Green / Blue

Picture Mode Settings

Press the [OK] button within any mode and follow the steps below to access the **Picture Mode Settings Screen**.

- Use the [] button to select [].
- Use the [] [] [] [] buttons to select an option, and confirm by pressing the [OK] button.
- Press the [OK] button once again to exit the **Picture Mode Settings Screen**.

Picture Mode Settings Options

RESOLUTION	3M (2048x1536) / 1M (1280x1024) / VGA (640x480) (Higher picture resolution takes up more space on the card.)
QUALITY	Superfine / Fine / Normal
METERING	Center / Multi / Spot
WHITE BALANCE	Auto / Daylight / Cloudy / Fluorescent / Tungsten
EFFECT	Select from various special effects

Playback Mode Settings

Press the [OK] button within any mode and follow the steps below to access the **Playback Mode Settings Screen**.


- Use the [] button to select [].
- Use the [] [] [] [] buttons to select an option, and confirm by pressing the [OK] button.
- Press the [OK] button once again to exit the **Playback Mode Settings Screen**.

Playback Mode Settings Options

LOCK	Lock one or all of your picture and video files. When locked they will not be able to be deleted.
DELETE	"One" (Delete the currently displayed video or picture) or "All"
SLIDE SHOW	Start a slide show, and adjust the slide show settings
EFFECT	Select from various special effects
ROTATE	Rotate the picture
RESIZE	Resize the picture
VOICE MEMO	Record a voice memo, or delete a previously recorded voice memo.
START-UP IMAGE	Change the start up image.


Connecting the camera

Connecting your camera to a TV

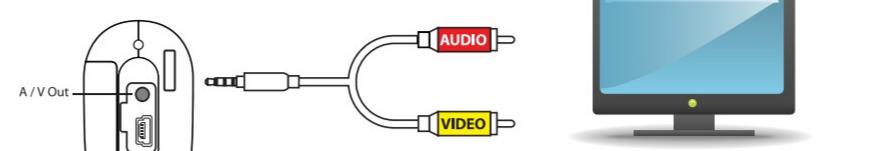

To enjoy and watch or view your videos and pictures on a television, please follow the instructions below:

- Turn off the camera.
- Insert the SD card into the card slot (as shown below) until it clicks and locks into place.
- To remove the card, gently push it in until it pops out.



(SD card not included)

1. Please do not disconnect the USB cable during loading, as it may cause damage to the camera and the files on the SD card.

2. Connect the black plug of the provided A / V Cable to your camera's A / V OUT jack.

3. Connect the smaller end of the USB cable into the camera's USB port.

4. Turn ON the camera.

5. Look for your camera by clicking on My Computer, it should usually appear as "Removable Disk". Select a file on your camera, and simply move it into your computer (we recommend copying the files into the "My Videos" or "My Pictures" folder of your computer) in the usual way (drag-and-drop, copy-and-paste). Or open the Media Impression software, to easily back up your video and photo files.

6. Use the [] or [] button to select a video file, and press the [Record] button to begin or stop playback.

OR

Select a JPEG picture file and press the [OK] button and select "Slide Show" from the

Playback Mode Settings Screen. Press the [] button and select "Start" to begin a slideshow of all the pictures stored on the camera's SD card.

7. Please do not disconnect the USB cable during loading, as it may cause damage to the camera and the files on the SD card.

8. Connect the black plug of the provided A / V Cable to your camera's A / V OUT jack.

9. Connect the smaller end of the USB cable into the camera's USB port.

10. Turn ON the camera.

11. Look for your camera by clicking on My Computer, it should usually appear as "Removable Disk". Select a file on your camera, and simply move it into your computer (we recommend copying the files into the "My Videos" or "My Pictures" folder of your computer) in the usual way (drag-and-drop, copy-and-paste). Or open the Media Impression software, to easily back up your video and photo files.

12. Use the [] or [] button to select a video file, and press the [Record] button to begin or stop playback.

13. Please do not disconnect the USB cable during loading, as it may cause damage to the camera and the files on the SD card.

14. Connect the black plug of the provided A / V Cable to your camera's A / V OUT jack.

15. Connect the smaller end of the USB cable into the camera's USB port.

16. Turn ON the camera.

17. Look for your camera by clicking on My Computer, it should usually appear as "Removable Disk". Select a file on your camera, and simply move it into your computer (we recommend copying the files into the "My Videos" or "My Pictures" folder of your computer) in the usual way (drag-and-drop, copy-and-paste). Or open the Media Impression software, to easily back up your video and photo files.

18. Use the [] or [] button to select a video file, and press the [Record] button to begin or stop playback.

19. Please do not disconnect the USB cable during loading, as it may cause damage to the camera and the files on the SD card.

20. Connect the black plug of the provided A / V Cable to your camera's A / V OUT jack.

21. Connect the smaller end of the USB cable into the camera's USB port.

22. Turn ON the camera.

23. Look for your camera by clicking on My Computer, it should usually appear as "Removable Disk". Select a file on your camera, and simply move it into your computer (we recommend copying the files into the "My Videos" or "My Pictures" folder of your computer) in the usual way (drag-and-drop, copy-and-paste). Or open the Media Impression software, to easily back up your video and photo files.

24. Use the [] or [] button to select a video file, and press the [Record] button to begin or stop playback.

25. Please do not disconnect the USB cable during loading, as it may cause damage to the camera and the files on the SD card.

26. Connect the black plug of the provided A / V Cable to your camera's A / V OUT jack.

27. Connect the smaller end of the USB cable into the camera's USB port.

28. Turn ON the camera.

29. Look for your camera by clicking on My Computer, it should usually appear as "Removable Disk". Select a file on your camera, and simply move it into your computer (we recommend copying the files into the "My Videos" or "My Pictures" folder of your computer) in the usual way (drag-and-drop, copy-and-paste). Or open the Media Impression software, to easily back up your video and photo files.

30. Use the [] or [] button to select a video file, and press the [Record] button to begin or stop playback.

31. Please do not disconnect the USB cable during loading, as it may cause damage to the camera and the files on the SD card.

32. Connect the black plug of the provided A / V Cable to your camera's A / V OUT jack.